

Installation Instructions

03-0205 SpeedyMoto Ducati Monster Top Triple Clamp

Fits 2002 - current 620, 750, 800, 900, 1000, S2Rs, S4Rs

Parts included


- 1. One SpeedyMoto top triple clamp
- 2. Three stainless M8 x 18 mm Allen head bolts (Fitted)
- Note:**
- You may need to purchase new grips, if the stock units become damaged
- during disassembly.



Tools required

- 1. 6 mm Allen wrench
- 2. 8 mm Open-end wrench
- 3. Dead-blow mallet
- 4. Torque wrench

Installation

- 1. Remove fairing (If applicable).
- 2. Remove instrument pod.
- 3. Disassemble all controls, grips, etc. from stock handlebar.
- 4. Remove stock bar clamps, risers, and handlebar.
- 5. Loosen nuts holding wiring harness frame, behind headlight bucket, to unhook
- harness frame from instrument pod vibration damper pads.
- 6. Unscrew and retain vibration damper pads for use on the SpeedyMoto triple
- clamp.
- 7. Loosen all 3 bolts from top triple clamp.
- 8. Remove stock top triple clamp by gently tapping the bottom of the clamp. Be
- mindful to tap evenly around all edges of the bottom of the clamp.
- 9. Install your clip-ons onto fork legs. Slightly tighten the clip-ons for now.
- 10. Center SpeedyMoto top triple clamp onto forks and steering stem nut.
- 11. Carefully tap down SpeedyMoto top triple clamp until fully seated. Be mindful
- to tap evenly across the entire surface.
- 12. Torque all 3 bolts to 14 Nm (~10.5 Ft. Lbs.).
- 13. Reassemble controls, grips, etc. onto your clip-ons.
- 14. Adjust your clip-ons for correct height, and angle for your usual riding
- position. Torque your clip-ons' bolts to the manufacturer's recommendations.
- 15. Reassemble wiring harness frame back onto the instrument pod vibration
- damper pads. Tighten nuts holding harness frame, found behind headlight
- bucket.
- 16. Reassemble instrument pod.
- 17. Reassemble fairing (if applicable).
- 18. Do a pre-flight check: Turn the handlebars to extreme left, then right while
- twisting the throttle. Make sure that the throttle freely rotates from stop to stop.
- Also make sure of proper cable slack.
- 19. Ride it, and tell all your friends about SpeedyMoto!

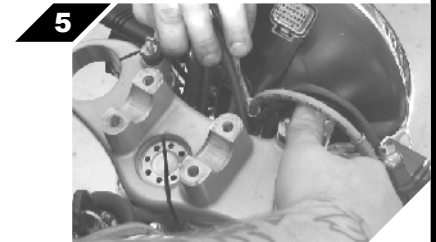

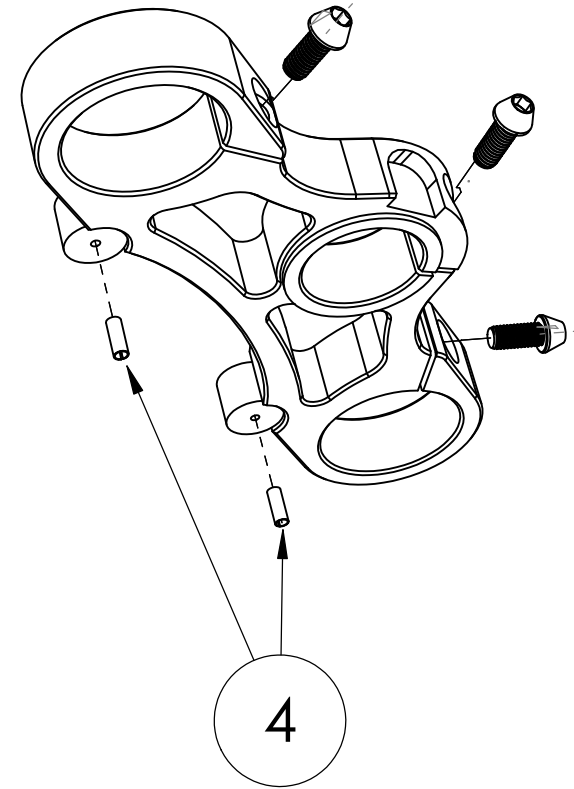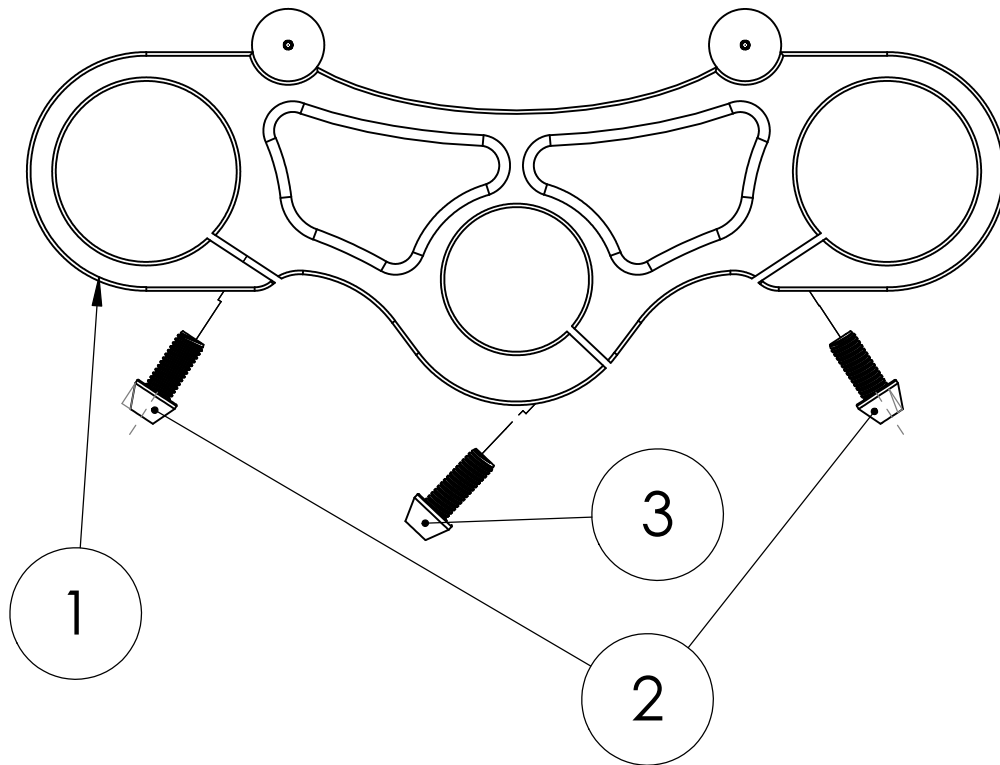

<i>ITEM NO.</i>	<i>PART NUMBER</i>	<i>QTY.</i>
1	MONSTER BODY 03-0205	1
2	M8X18	2
3	M8X20	1
4	ROLLPIN	2